



# Crestron

## TO START THE SYSTEM:

Touch the screen on the small black Crestron box located on the lectern's desktop; this will "wake up" the system. On the system's start up screen, touch the **Press Here To Start** button.

 
The projector will begin to warm-up. This will take about 60 seconds. (To move the projector screen up and down use the wall-mounted control panel located to your back left, by the door.)

**NOTE:** The projector will always turn on when starting the system. If projection is not wanted press the **Projector Mute** button on the upper center of the screen. Projector will still be on and ready to use when needed.

## **Controlling the volume:**

Volume is controlled from the Crestron Touch Panel, using the up and down arrows on the right part of the screen, the **Mute** button to stop all audio.

Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Computer

1. Press the CTRL-ALT-DEL keys.
2. Enter your NetID in the **User name** text box.
3. Enter your password in the **Password** text box.
4. Make sure that UMW is selected in the **Log on to** drop down window, and click OK.

## **To access the administrative account on the computer:**

1. Enter Instructor in the **User name** text box.
2. Enter the password for the room in the **Password** text box.
3. Select the name of the computer (the this computer option) in the **Log on to** drop down window, and click OK.

- To access the generic student account follow the same directions as the administrative account, but enter student in the **User name** text box, and leave the **Password** text box blank.

Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401

 
 




# SharePoint

If you have documents in the shared space in EagleNet:

1. Log into EagleNet.
2. Migrate to your department's shared drive:
  - Click on **My Links** in the upper right corner.
  - Choose **My SharePoint Sites**.
  - Select your Department.
3. Click on **Shared Documents**.

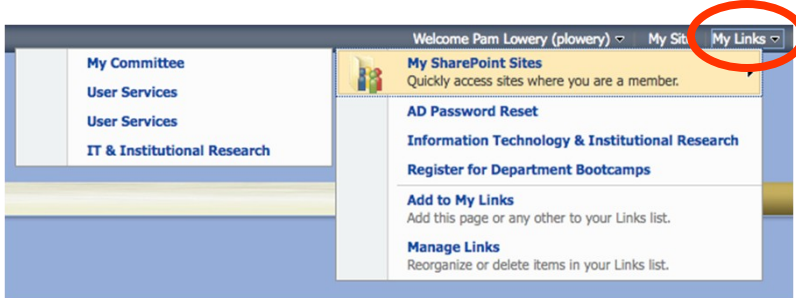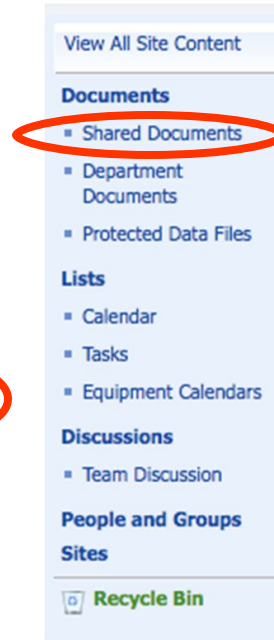


Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Computer Image

 1. Turn on the computer (via the computer's power button) inside the lectern, if it is not already on.
2. On the Crestron Touch Panel, touch the **PC** button.

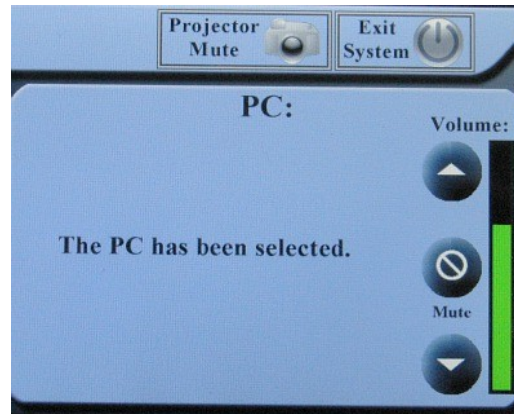

Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Laptop Image

This lectern has a hook-up for a laptop provided through a pop up panel on the desktop.

1. Turn on your laptop.
2. On the Crestron Touch Panel, touch the **Laptop** button.
3. Touch **VGA**, **HDMI**, or **DisplayPort** depending on the cord you're using. (It will match the picture on the touch panel.)



 
Information Technology Help Desk • 540-654-2255 • [helpdesk@umw.edu](mailto:helpdesk@umw.edu)  
George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Doc Cam

If you need to zoom in and out on the picture, use the up and down arrows labeled **Zoom**.

If you need to focus your image, touch the **Auto-Focus** button.

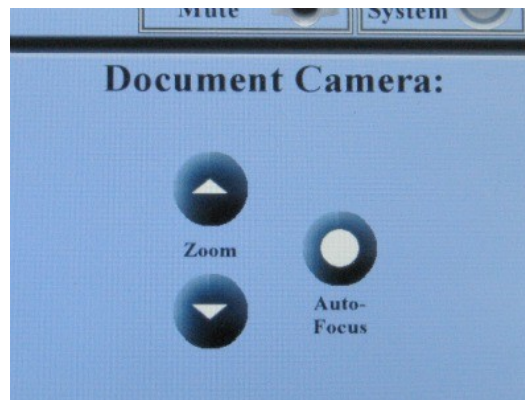




Information Technology Help Desk • 540-654-2255 • [helpdesk@umw.edu](mailto:helpdesk@umw.edu)  
George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Blu-Ray



1. In the lectern, press the  button on the Blu-Ray Player.
2. Place your disk on the tray and press  again, to close.
3. On the Crestron Touch Panel, touch the **Blu-Ray** button.
4. Use the controls on the touch panel to control your Blu-Ray:
  - **Menu** button—will take you to the Blu-Ray's menu.
  - Arrow buttons—will allow you to move around in the Blu-Ray's menu.
  - **Enter** button—will select an item on the Blu-Ray's menu.
  - Standard playback buttons—will allow you to **Play**, **Pause**, **Stop**, **Rewind**, and **Fast Forward**.
  - **Volume** arrow buttons—will allow you to adjust the volume, **Mute** will mute all audio.
  - **Projector Mute**—sends a black screen to the projector.
5. When you are finished, eject your disk by pressing the  button on the Blu-Ray Player, and again, to close.

 




Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# DVD




1. In the lectern, press the  button on the DVD Player.
2. Place your disk on the tray and press  again, to close.
3. On the Crestron Touch Panel, touch the **DVD/VCR** button.
4. Use the controls on the touch panel to control your DVD:
  - **Menu** button—will take you to the Blu-Ray's menu.
  - Arrow buttons—will allow you to move around in the Blu-Ray's menu.
  - **Enter** button—will select an item on the Blu-Ray's menu.
  - Standard playback buttons—will allow you to Play, Pause, Stop, Rewind, and Fast Forward.
  - **Volume** arrow buttons—will allow you to adjust the volume, **Mute** will mute all audio.
  - **Projector Mute**—sends a black screen to the projector.
5. When you are finished, eject your disk by pressing the  button on the DVD Player, and again, to close.




Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# VCR

 

1. Inside the lectern, load your VHS tape in the VCR Player.
2. On the Crestron Touch Panel, touch the **DVD/VCR** button.
3. Use the controls on the touch screen to control your VHS playback:
  - **Menu** button—will take you to the VHS's menu.
  - Arrow buttons—will allow you to move around in the VHS's menu.
  - **Enter** button—will select an item on the VHS's menu.
  - Standard playback buttons—will allow you to **Play**, **Pause**, **Stop**, **Rewind**, and **Fast Forward**.
  - **Volume** arrow buttons—will allow you to adjust the volume, **Mute** will mute all audio.
  - **Projector Mute**—sends a black screen to the projector.
4. When you are finished, eject your VHS tape by pressing the  button on the VCR Player.




Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401



# Video

 On the top of the lectern, connect your device to the yellow, black, and red connectors on the pop-up panel.


If you have an external video source, such as a camera, or other analog device, press the **Video** button on the Crestron Touch Panel.

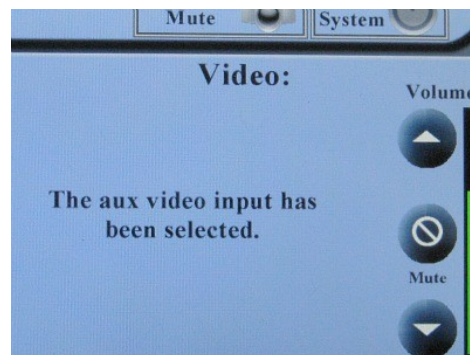

Information Technology Help Desk • 540-654-2255 • helpdesk@umw.edu  
 George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401





# Shutting Down

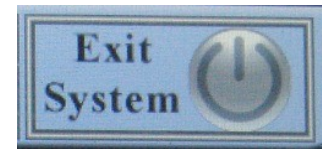 

When you are finished, shut down the Crestron Touch Panel by touching the **Exit System** button in the upper right hand corner of the panel.

  It will then ask you if you are sure you want to exit, choose **Yes** and wait for the projector to cool down.

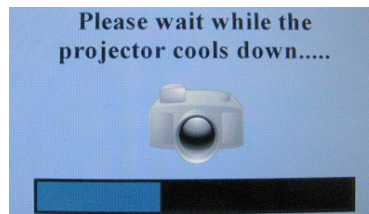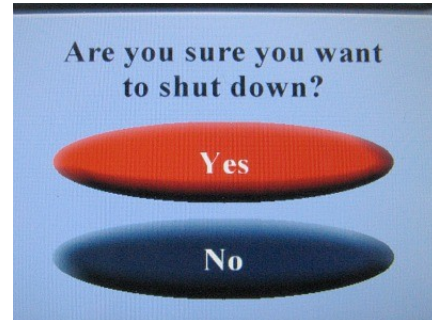

Information Technology Help Desk • 540-654-2255 • [helpdesk@umw.edu](mailto:helpdesk@umw.edu)  
George Washington Hall B027 • 1301 College Avenue, Fredericksburg, VA 22401

**TROUBLESHOOTING TIP:** If your laptop image is not being projected, you may need to send a video signal to your laptop's VGA jack. This is usually done by pressing the blue FN (function) key on the laptop keyboard in combination with one of the F1-F12 keys on your keyboard. Look for a blue picture on one of the F1- F12 keys that looks like a monitor and press it then release. If this doesn't work, try it once more. If you still have no success, you will need to determine what the specific commands to do this are for your laptop.

**VOLUME TIP:** If no sound comes out of the speakers, make sure the volume is not muted on the computer:

- Double Click the speaker icon. This can be found in the bottom, right corner of the computer screen. The image is what will appear.
- Uncheck all mute boxes (4 total) that run across the bottom of the window.

